





0

Put the TL-HEAD on valve and lock the thumblock lever.

CO<sub>2</sub> out of the cartridge by careful counterclockwise rotation.

After using the cartridge, its possible to inflate the tyre by manual pumping. Compatible with all floor pumps with a hose of 5,0 - 5,7 mm inner diameter



