

Parts

Various parts for stay-assembling

Various parts for mounting the fenders

Spacers for:
 ▶ Forks with disc brakes
 ▶ Frame mounting rear
 Optional





To item 1.

To item 2.




To item 3.

ATTENTION!

Keep the minimum distance of 15 mm between fender and tyre.

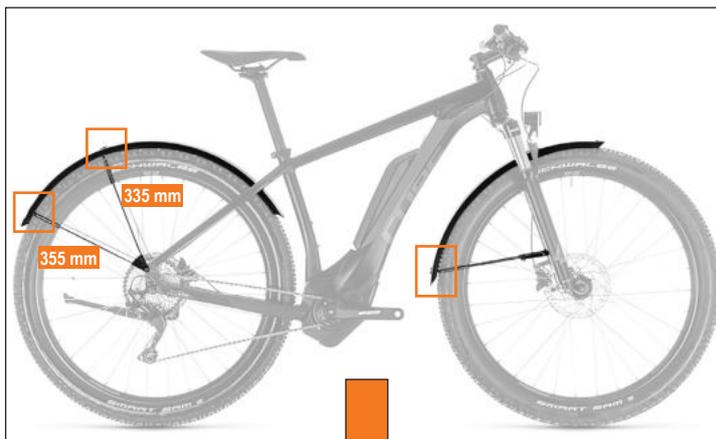


1. Stay-assembling front + rear

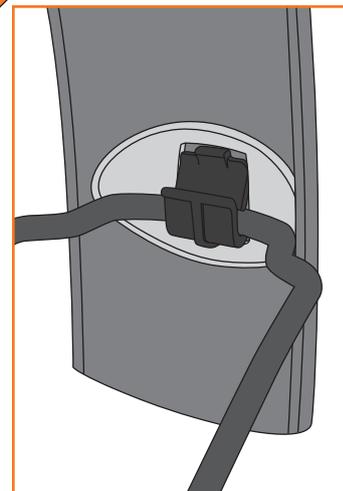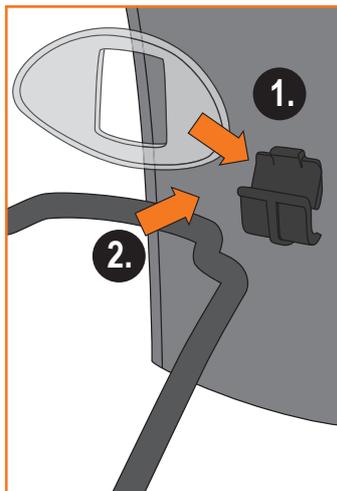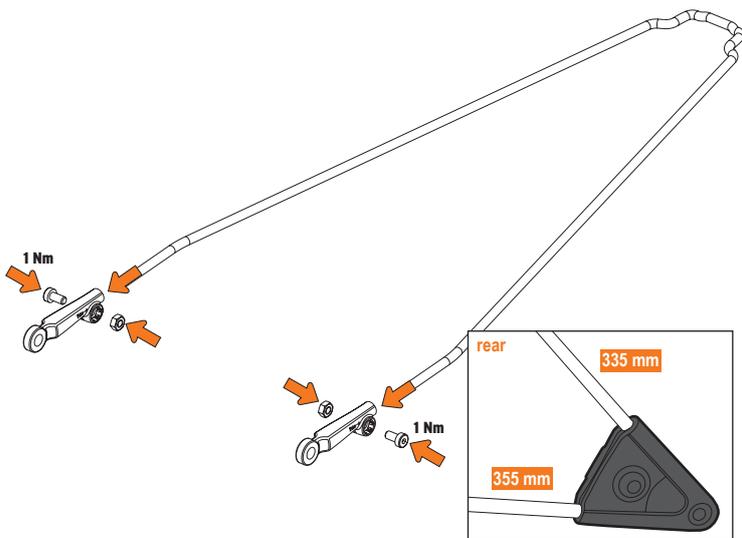


2. Frame mounting front





2.1 Mounting the front plugs

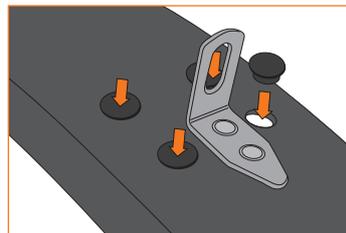


2.1.1 Bracket-fitting front

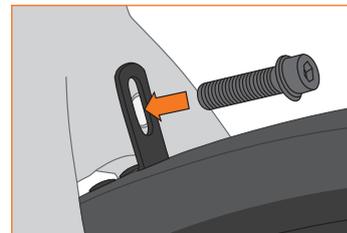


2.2 Optional . fitting straps front

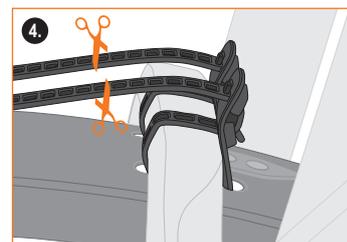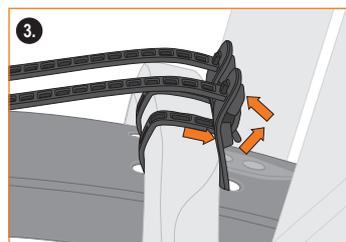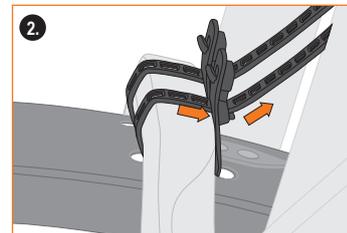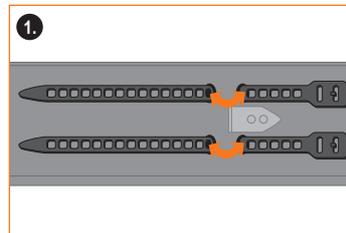

2.3 Stay attachment front incl. lengths adjustments of the stays

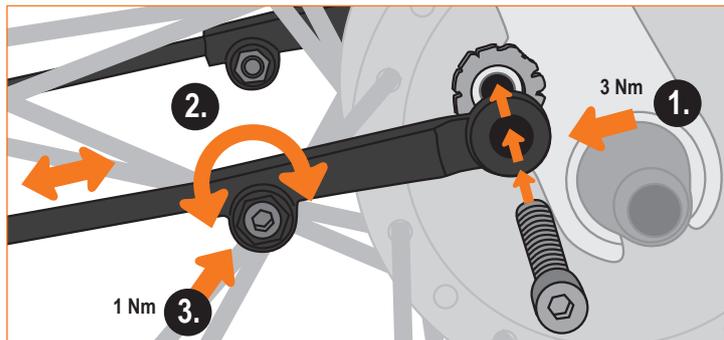



Optional:
Clamp

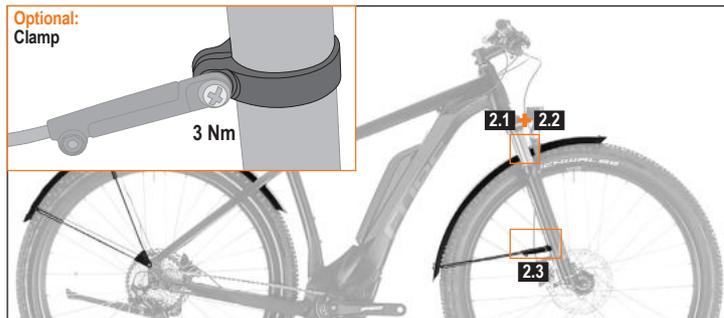

3. Frame mounting rear


3.1 Remove the rear wheel

3.2 Mounting the rear mudguard onto the frame direct by screwing it on at an angle of 0°

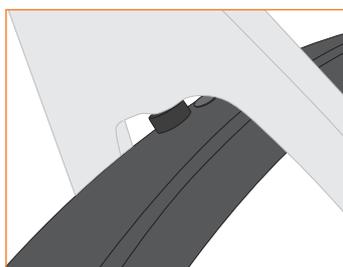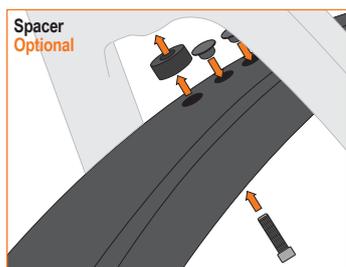


3.3 Mounting with an angle of 90°

3.3.1 Screw the bracket


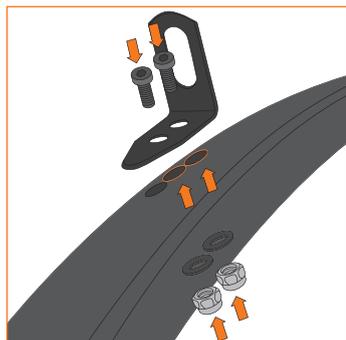


3.3.2 Screw the fender on the frame

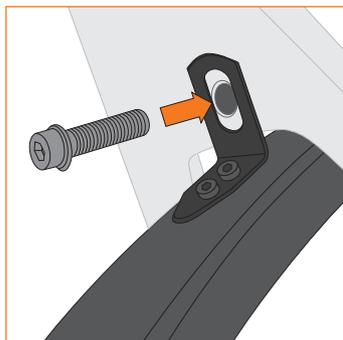


3.4 Remount the rear wheel


3.5 Rear stay assembling

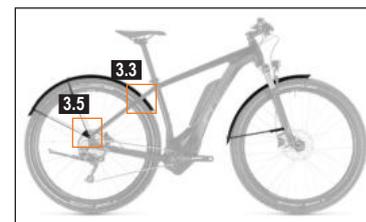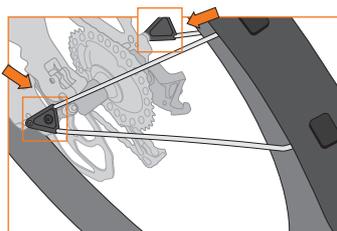

3.5.1 Stay attachment rear incl. lengths adjustments of the stays

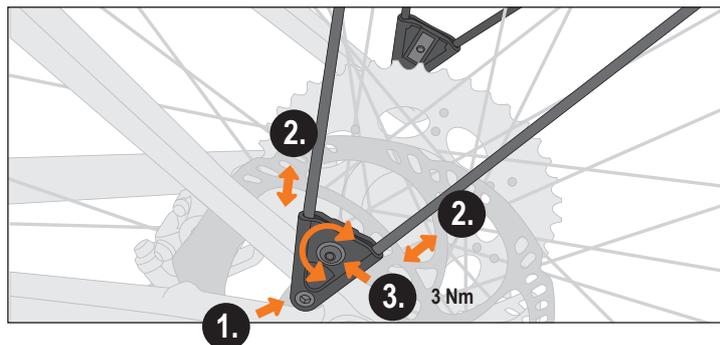

ATTENTION OPTIONAL! Mounting of spacers for frames with disc brakes

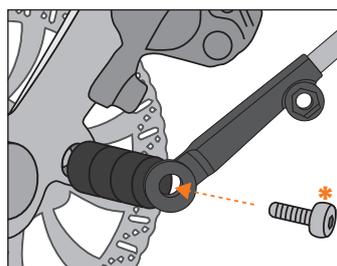

* Screw is not included in the scope of delivery

ACCESSORIES:



11259 Suspension fork mounts for Rock Shox and Suntour



11260 Suspension fork mounts for Rock Shox and Suntour, angled