



MOUNTING

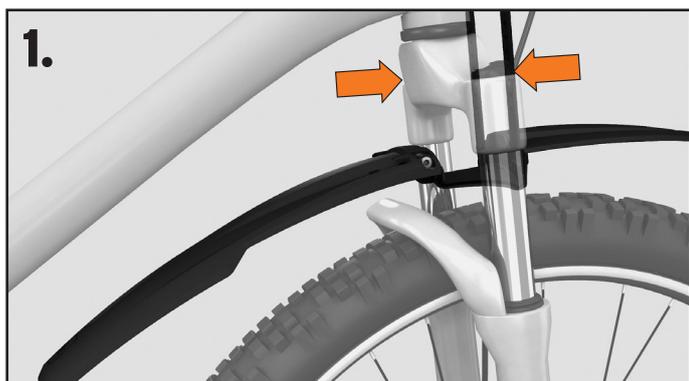

1. Fixing onto the fork crown in seconds (paintwork protection for better grip)

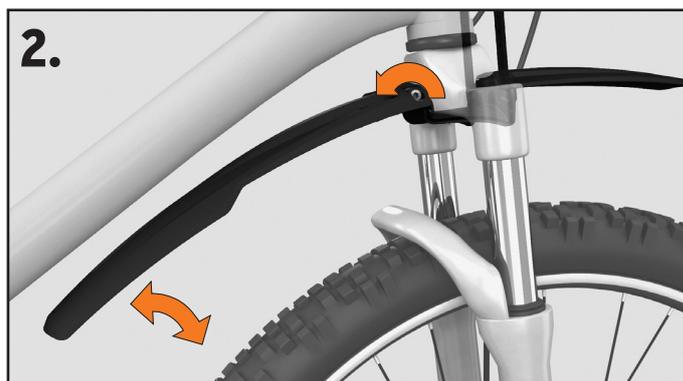


2. Angle adjustment



3a. Thick fork crowns hooking on from above



3b. Thin fork crowns hooking on from bottom up

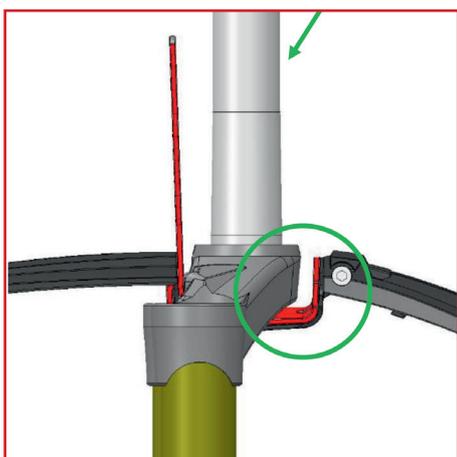

ACHTUNG / CAUTION



passt nur bei 1.5" tapered Gabeln!
fits only 1.5" tapered forks

EN. SHOCKBOARD VARIO

Suspension fork mudguard for 1.5" tapered steerer tubes. Especially designed for upside-down forks and for fork arches at the front **AND/OR** at the rear.