



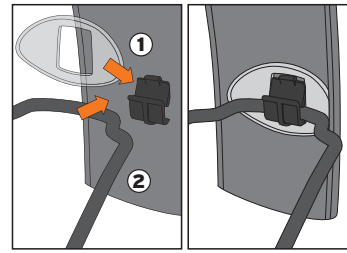


Parts

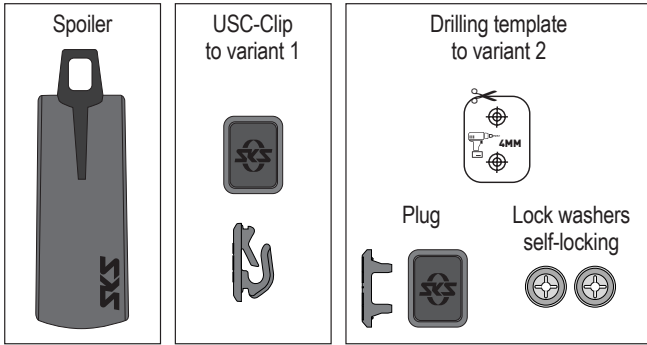



3. If available: reuse damping rubber and clip stay, use new USC-Clip

VARIANT 2  
drill holes

1. Slide on spoiler
2. Cut out the drilling template and place it in position

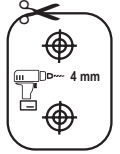


1. Preparations: Remove wheel (front or rear)

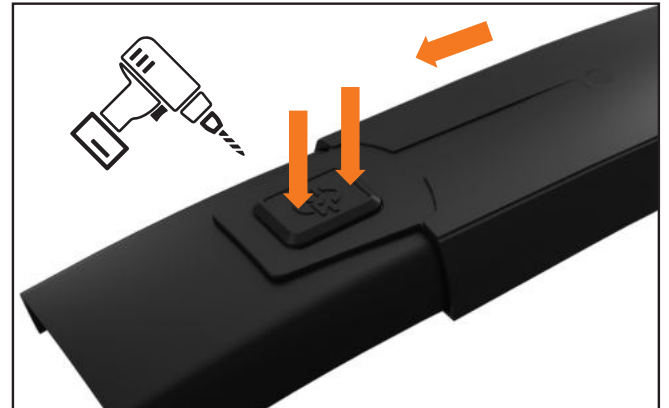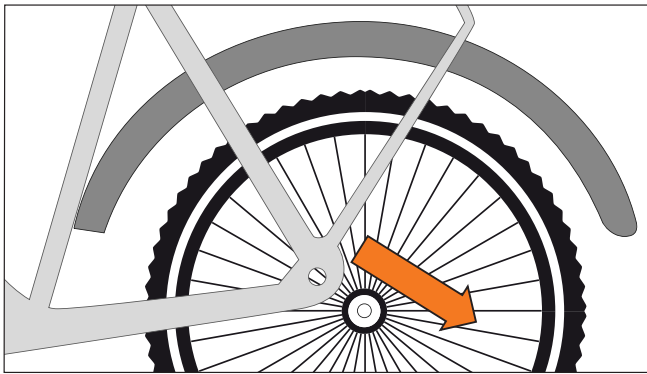

- TIP: use adhesive tape to fix
3. Drill at the pre-drawn positions, 4mm
  4. Assemble individual parts

OPTIONAL

CHECK

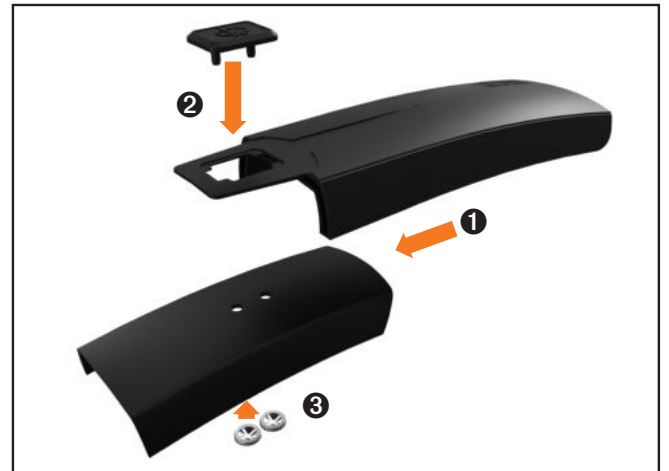


VARIANT 1

hole at 37-39mm

1. Disassemble stay, remove clip

2. Slide on spoiler and insert USC clip

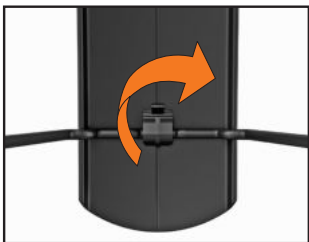

ATTENTION! Correct installation of lock washers



TIP: use suitable tool